THRUSTMASTER®

Formula Wheel Add-On Ferrari SF1000 Edition Wireless Connection Tutorial

Wi-Fi Pairing & UDP configuration

PRELIMINARY STEP

MAKE SURE TO UPDATE YOUR DRIVER AND FIRMWARE

OF YOUR BASE

COMMANDS & SCREEN NAVIGATION

: Navigate in menu (DPAD)

: Change Skin (turn left or right)

: Menu (push)

: Change Screen (turn left or right)

: Dark/Bright Mode (push)

: Change menu parameter (turn left or right)

: Validate menu parameter (push)

: Switch ON LED+LCD (Toggle up)

: Switch OFF LED+LCD (Toggle down)

Display buttons assignment
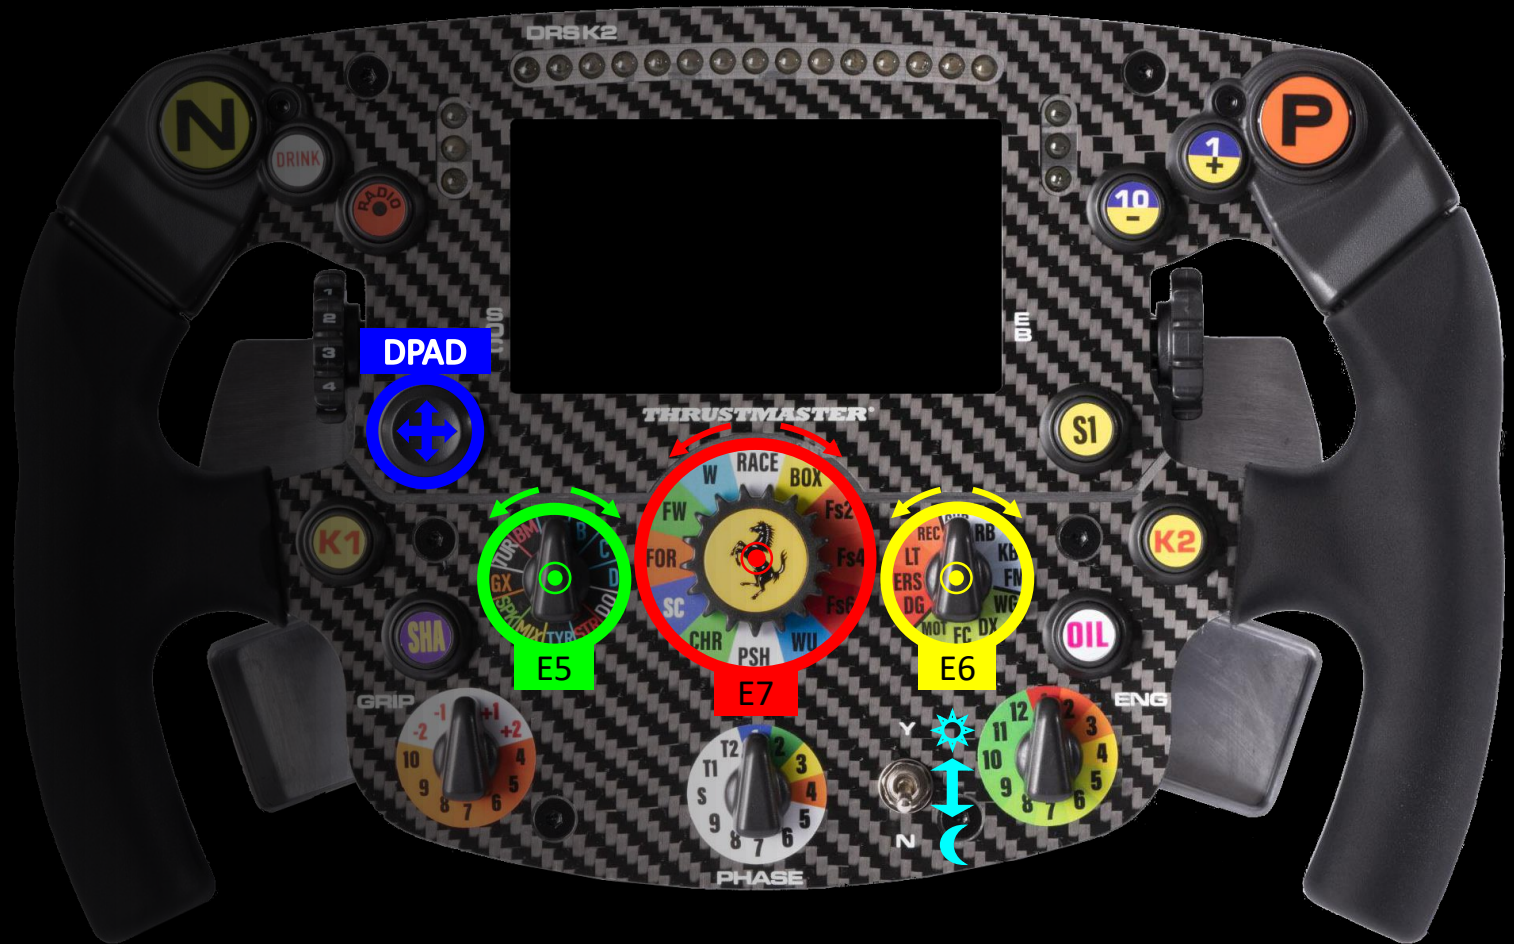
1) ENABLE WI-FI CONNECTION

To enable the Wi-Fi of your wheel:

a. First, enter the menu by pressing the E5 button (⊙).

b. Then using the DPAD (✛), go right (➡) to the Wi-Fi enable button (Wi-Fi ⬤○).

c. Finally press the E7 (⊙) button to enable Wi-Fi it the circle will move to the right (Wi-Fi ○⬤).

2) PAIR YOUR WHEEL TO YOUR HOME NETWORK

WI-FI Parameters:

- SSID   TM_Connect_98378F
- IP   29.7.19.99
- UDP   0
- MAC   48-3F-DA-98-37-8F
- Signal Strength 100.0 %

THRUSTMASTER

!
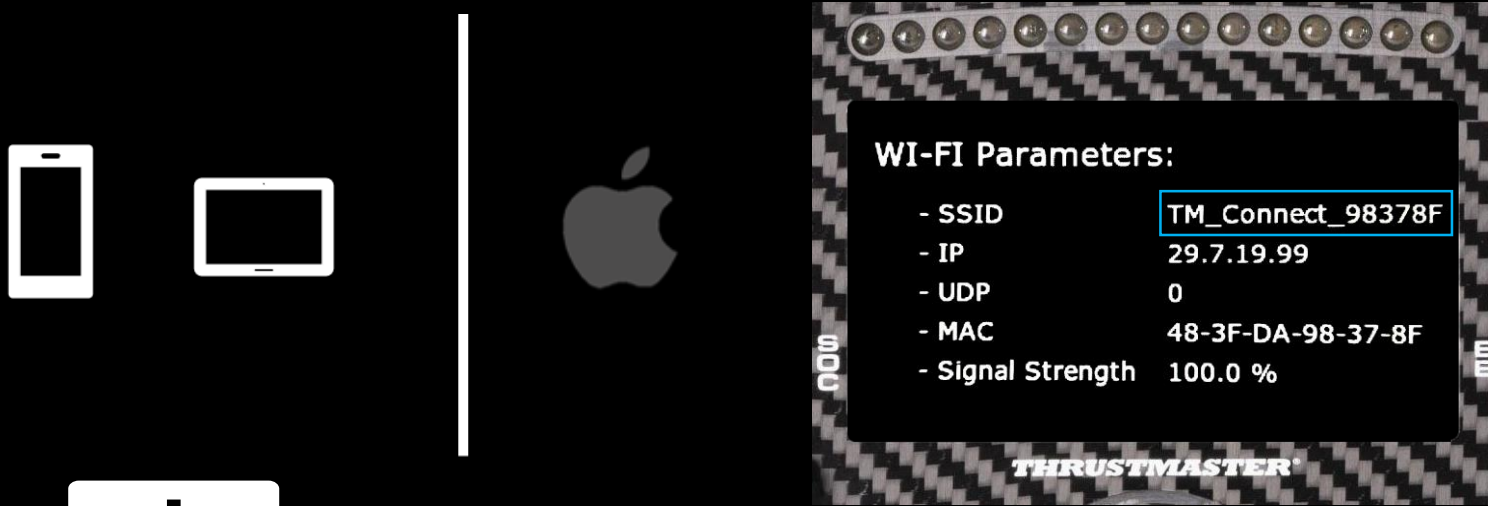
This wheel includes a Wi-Fi module to let you enjoy display functionalities through UDP-compatible games.

This Wi-Fi module have a unique identifier and when it is not paired to a network it will broadcast its identifier, in the **example** it is '**TM_Connect_98378F**'. At the end of the process, it will be replaced by your home network name.

Please record this identifier as you will have to use in the pairing process

2) PAIR YOUR WHEEL TO YOUR PHONE OR TABLET (USING IOS)

WI-FI Parameters:

- SSID   TM_Connect_98378F
- IP   29.7.19.99
- UDP   0
- MAC   48-3F-DA-98-37-8F
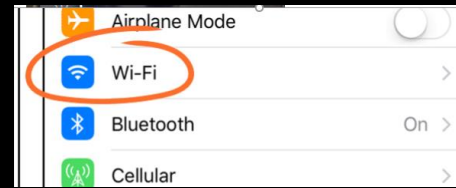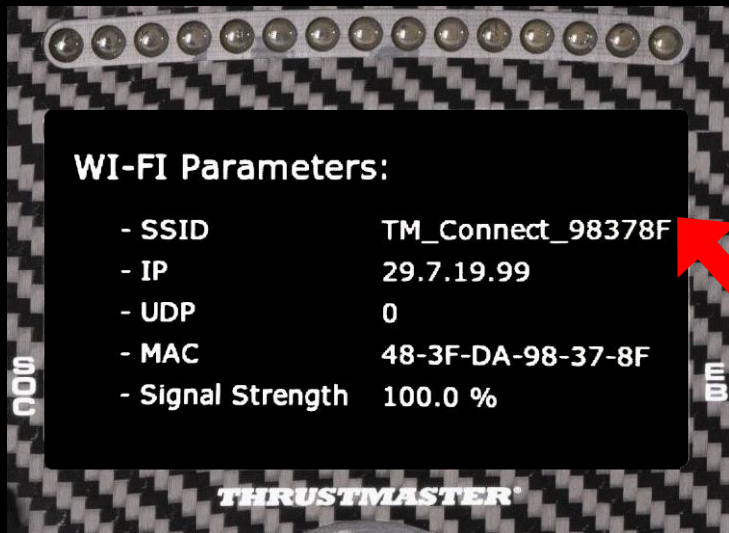- Signal Strength   100.0 %

THRUSTMASTER®

Airplane Mode

Wi-Fi

Bluetooth   On

Cellular

Wi-Fi

Wi-Fi

PARTAGES DE CONNEXION

📶 4G

AUTRES RÉSEAUX

TM_Connect_98378F

Autre...

Mot de passe de « TM_Connect_98378F »

Annuler   **Saisir**   Se connecter

Mot de passe   12345678

Wi-Fi en rapprochant votre iPad de tout iPhone, iPad ou Mac qui s'est connecté à ce réseau et qui vous a dans ses contacts.

---

a. Go to settings menu

b. Select Wi-Fi

c. Look for your device identifier (TM_Connect_98378F) Select it

d. Enter the password '**12345678**' and click on **connect.** If needed, select again this new network on your Smartphone

3) THRUSTMASTER CONNECT PORTAL
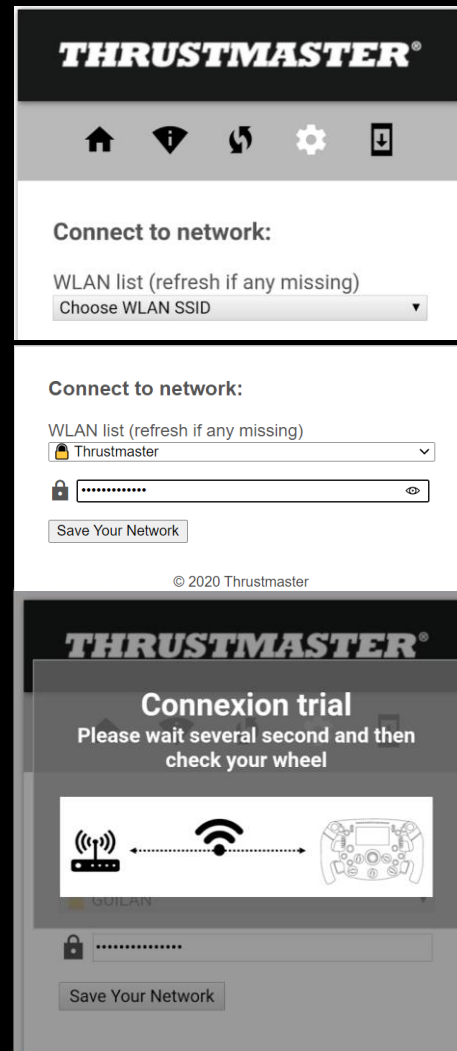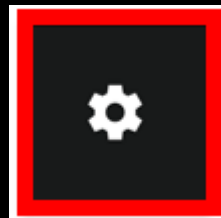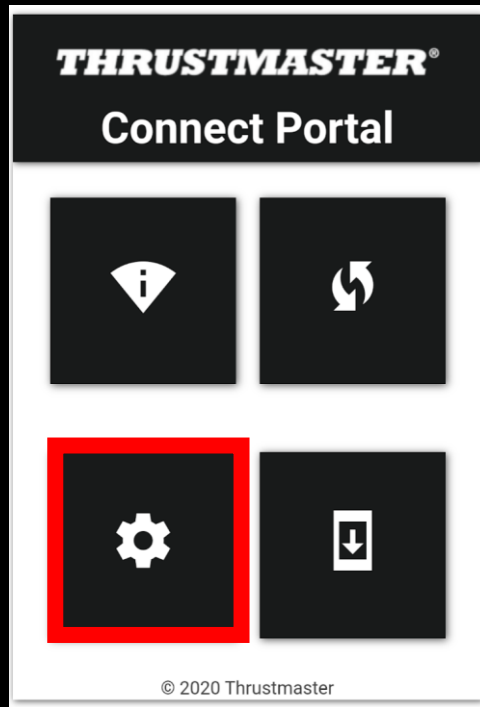
If the pairing between your device and the wheel succeed you will arrive on the:

"Thrustmaster Connect portal"

a. Go to settings menu

b. Go the selection list and choose your favorite Wi-Fi

c. Once selected, if there is a password, type it in the box and click on 'save your network'

d. The wheel will now try to pair to your Wi-Fi network

4) FINAL CHECK

Error message : don't worry

At the end of the process, you may encounter a warning message ' impossible to access to the page'.

It is because Wi-Fi will save setting then reboot to connect to you network.

Don't worry and follow the process

you succeed to pair the wheel to your network, you will notice the SSID parameter changed
from 'wheel identifier'
to 'your network name'

Désolé, impossible d'accéder à cette page.

29.7.19.99 a mis trop de temps pour répondre

Effectuez une recherche Bing pour 29 7 19 99

ERR_CONNECTION_TIMED_OUT

WI-FI Parameters:
- SSID   TM_Connect_98378F
- IP   29.7.19.99
- UDP   0
- MAC   48-3F-DA-98-37-8F
- Signal Strength   100.0 %

WI-FI Parameters:
- SSID   Thrustmaster
- IP   192.168.43.191
- UDP   0
- MAC   48-3F-DA-98-37-8F
- Signal Strength   98.0 %
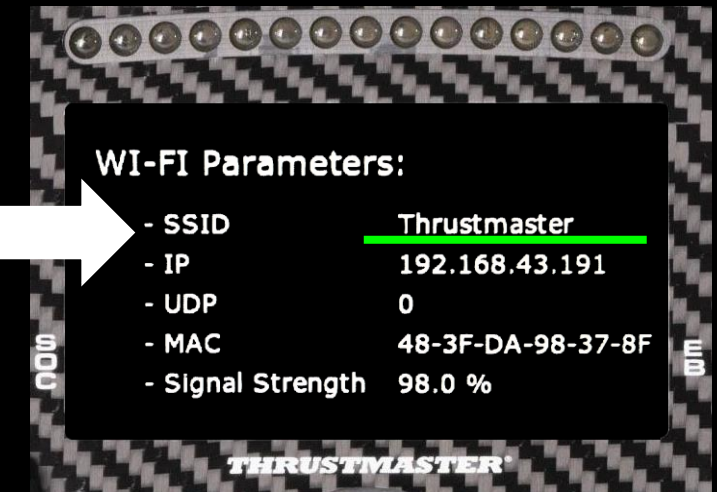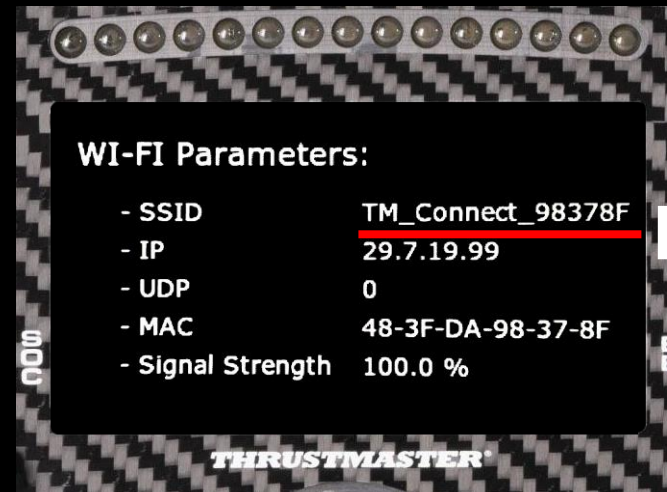
5) ENTER YOUR WHEEL IP IN THE F1 2020 GAME

A

nd to our official website and keep up to date
th all the latest F1® 2020 news!

ASSISTS | GAME OPTIONS

B

GAME OPTIONS

Settings
Credits
Delete All Save Data
Autosave   < > On
RaceNet

C

SETTINGS

Controls, Vibration & Force Feedback
Audio Settings
Graphics Options
On-Screen Display
Telemetry Settings
Camera Customisation
Tobii Eye Tracking

WI-FI Parameters:
- SSID   Thrustmaster
- IP   192.168.43.191
- UDP
- MAC   48-3F-DA-98-37-8F
- Signal Strength   98.0 %

THRUSTMASTER®

D

TELEMETRY SETTINGS

D-BOX	< > On
Fanatec LED	< > On
SLI Pro LED	< > Off
SLI Pro LED Brightness	< > ▭ 127
UDP Telemetry	< > On
UDP Broadcast Mode	< > Off
UDP IP Address	192.168.77.62
UDP Port	20777
UDP Send Rate	< > 20Hz
UDP Format	< > 2020
Your Telemetry	< > Restricted

In Game, go the game options

Go to Settings

Go to Telemetry* Settings

Switch ON the UDP** Telemetry &
Finally enter your wheel IP

*   Telemetry is a set of data such as (brake temperature, fuel load, tyres wear...)

** UDP (User Datagram Protocol) is a protocol commonly use to exchange data between PC/Console and a device
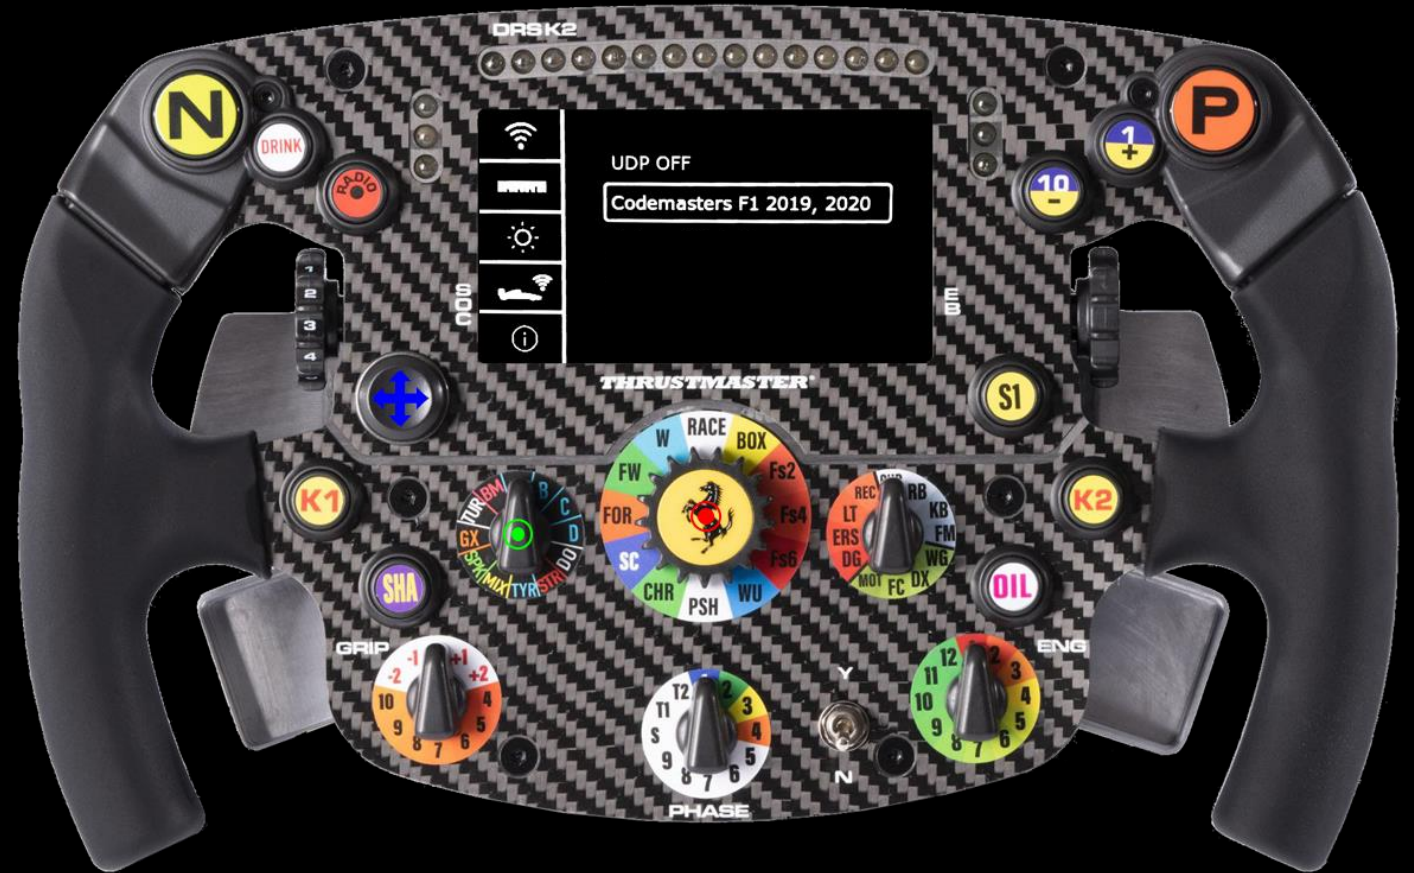
6) START THE UDP* SESSION

To start enjoying your display information with UDP :

First, enter the menu by pressing the E5 button (⦿).

Second, go the UDP game (🏎📶)selection using the DPAD (✛).

Then using the DPAD (✛), go right (➡) to the select your favorite game

Finally press the E7 (⦿) to start the UDP

UDP OFF
Codemasters F1 2019, 2020

THRUSTMASTER®

* UDP (User Datagram Protocol) is a protocol commonly use to exchange data between PC/Console and a device

OWN THE RACE